

NEW


Swiv-L-Flex®

Sanitary Swivel Fittings & Adapters

Easy Hot Water Washdown in a Robust Patent-Pending Design

Features and Benefits

- Pre-loaded PTFE and stainless steel thrust rings assure smooth operation without end play
- Double seal design provides leak-free operation
- Heavy-duty retainer virtually eliminates common “clip ring failure” and swivel NPT fitting blow-off
- All 316L stainless steel or PTFE construction on wetted surfaces meet critical sanitary standards
- Swiv-L-Flex® motion offers smooth, easy swivel action regardless of temperature and pressure
- Designed for use with virtually all brands of spray nozzles, allowing full 360° swivel motion
- Versatile applications for most Saint-Gobain Performance Plastics rubber hoses, silicone hoses and fluoropolymer-lined hoses
- Easy handling reduces operator fatigue and misdirected spray down
- Safer than non-swivel connections

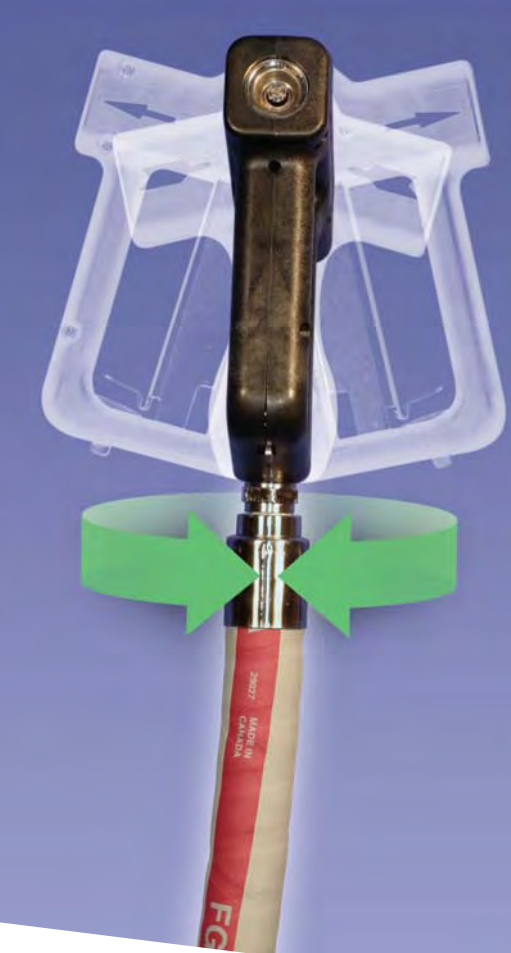

New Swiv-L-Flex® swivel fittings and adapters from Saint-Gobain Performance Plastics are safe and secure sanitary connections for pharmaceutical, biopharmaceutical, dairy, food and beverage applications. Designed for easy hot water washdown, Swiv-L-Flex®’s innovative, patent-pending design features pre-loaded PTFE and stainless steel thrust rings for smooth operation without end play. The double-seal construction provides a leak-proof seal, while the heavy-duty retainer virtually eliminates clip ring failure and fitting blow-off.

Compatible with Saint-Gobain Performance Plastics’ great variety of rubber hoses, silicone hoses, and fluoropolymer-lined hoses, Swiv-L-Flex® fittings and adapters use materials that meet stringent FDA requirements and 3-A sanitary standards. They are the operator’s dream for easy hot water washdown applications in pharmaceutical, food and beverage, as well as dairy industries.

Swiv-L-Flex[®] Sanitary Swivel Fittings and Adapters

Fitting Specifications

BODY MATERIAL: 316L stainless steel

SEALS: PTFE & high performance elastomers

SIZE: 3/4" hose barb x 1/2" male NPT swivel

MAX. WORKING PRESSURE: 150 PSI at 200° F hot water service



Adapter Specifications

BODY MATERIAL: 316L stainless steel

SEALS: PTFE & high performance elastomers

SIZE: 3/4" mini sanitary x 1/2" male NPT swivel

MAX. WORKING PRESSURE: 150 PSI at 200° F hot water service

HOOK UP: Standard "mini" gaskets and clamps



Easy and Quick Connections

Using the standard "mini" sanitary clamps and gaskets, Swiv-L-Flex[®] adapters can be easily and quickly connected with the sanitary clamps in the production or processing areas, making a wide range of hoses available for washdown applications.



Swiv-L-Flex[®] is a registered trademark. Patent pending.



Saint-Gobain Performance Plastics
460 Milltown Road • Bridgewater, NJ 08807
Tel: 1-800-435-3992 • Fax: 1-908-218-9009
www.reseal.com

Distributor Information: